

CLEAN REMOTE PROGRAMMING GUIDE



Step 1: Install Batteries

- 1). Open Cover: With Keypad facing you, first slide dark lens cover away from you (photo A, Step 1) and then lift lid upwards from the back (photo A, Step 2).
- 2). Insert two AAA batteries into the remote as shown below in photo B.
- 3). Close cover with keypad facing away from you by pressing downward (photo C, Step 1) and sliding it toward the front until it is aligned. (photo C, Step 2).
- 4). Test Remote by pressing the power button; the LED should light indicating that the batteries are in correctly. If LED doesn't light, then the batteries are either in wrong or the batteries are bad.



Photo A

Open with keypad facing you



Photo B



Photo C

Close with keypad facing away from you

Step 2: Program to TV

- 1). Turn on your TV and then stand back approximately 3-5 feet and point the remote at the CENTER of the front of your TV.
- 2). Press and firmly HOLD down the SETUP button, do not release. The LED will blink once and then after 7 seconds it will initiate code search. The LED will continue to blink every 2 seconds. Once your TV shuts off immediately remove your finger from the SETUP button; the code automatically locks in.
- 3). Turn TV on. Test the VOLUME to ensure it works properly. If volume works correctly move to STEP 3.

Step 3: Program to Set Top Box

- 1). With your TV on turn your TV to Channel 3
- 2). While pointing the remote at the set top box press and firmly HOLD down the * button, do not release. The LED will blink once and then after 7 seconds it will initiate code search. The LED will continue to blink every 2 seconds. Once your TV turns to a new channel immediately remove your finger from the * button; the code automatically locks in.
- 3). Test the remote by turning channels to ensure it works properly. If you are unable to change channels repeat Step 3.